



HP Elitebook 840 G1 Battery Replacement

Replacing the battery on your HP Elitebook 840 G1

Written By: Ashley Williams



INTRODUCTION

Replace dead or dying battery to solve for laptop powering off right away or quickly when unplugged



TOOLS:

- [Fingers](#) (1)




PARTS:

- [HP Elitebook 840 G1 Battery](#) (1)

Step 1 — Battery



 Working on your device while it is turned on may result in electric shock. Make sure to shut down and unplug your device before you begin.

 
- Flip device over so that the bottom panel is facing upwards.

Step 2




- Slide the latch, to the left.
- Slide the cover upwards to remove it.

Step 3

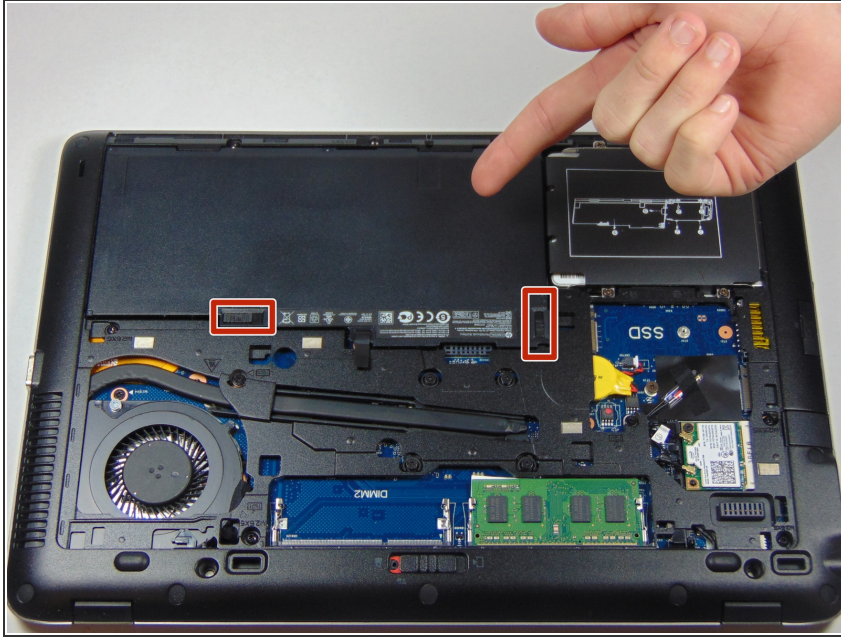

- Once the cover is removed you will be able to see the battery and the two latches that hold it in place.
- The two latches should be pulled back, one of which is spring loaded and must be held in place in order to remove the battery.
- Lift up and remove the battery.

 Step 4

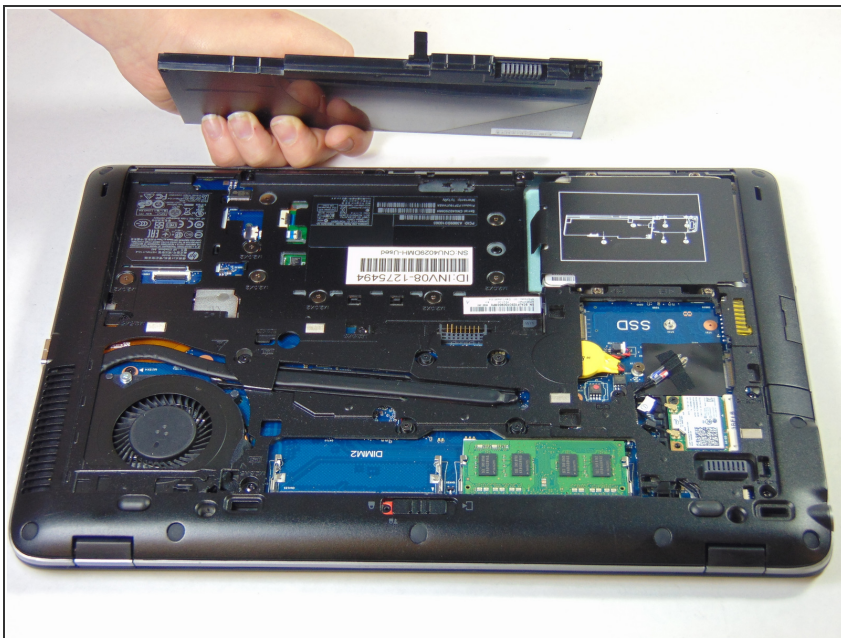

- Battery should easily be lifted up and out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-07 08:40:36 PM.